



CLEVER CLICK RIGID

Vinyl Flooring Installation Guide

Revolutionary, quick and easy flooring with the natural beauty of wood and stone



How to Install Clever Click Rigid

A Clever Click Rigid vinyl floor will transform your home and bring you years of pleasure.

To assist you, we have created this concise step-by-step guide.

However, to make the most of Clever Click Rigid flooring, you must understand how to install the product properly. If you do not install your floor properly, the guarantee will be void.

Suitable surfaces

Lightly textured or porous surfaces; well-bonded solid floors; dry, clean well-cured concrete (cured for at least 60 days prior); wood floors with plywood on top.

All surfaces must be clean and dust free.

Can be installed over radiant heated floors (do not turn heat above 29°C or 85°F).

Unsuitable surfaces

Rough, uneven surfaces including carpet and underlay. Rough, heavy textured and/or uneven surfaces may telegraph through the vinyl and distort the finished surface.

This product is not suitable in rooms that could potentially flood or rooms that have damp concrete or saunas.

Do not install this product in areas which are exposed to long term direct sunlight such as sun rooms or solariums.



Warning

Do not remove old resilient flooring. These products may contain either which can be harmful to your health.

Preparation

The rigid planks and tiles should be allowed to acclimatise at room temperature (approx 20°C) for 48 hours prior to installation.

Carefully check the floor for any defects before installation.

Check that all BATCH NUMBERS and ITEM NUMBERS are the same and that you have purchased sufficient material to complete the job. Remove any traces of glue or residue from the previous flooring.

New concrete floors need to dry out for at least 60 days prior to installation.

Wood plank floors require a plywood subfloor.

All nail heads must be driven down below the surface.

Securely nail all loose boards.

Scrape, plane or fill uneven boards, holes or cracks using floor-leveling compound if subfloor is uneven – over 1/8 in (3.2 mm) within a span of 4ft (1.2 m).

If installing over existing tile, use a floor leveling compound to skim coat grout lines.


Make sure the floor is smooth, clean, and free of wax, grease, oil or dust and sealed as necessary before laying planks.

Tools and supplies


Utility knife, spacers, pencil, tape measure, ruler and safety goggles.

How to Install Clever Click Rigid


Installation

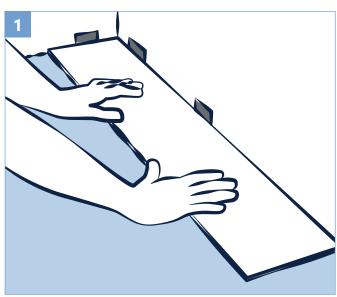


Start in a corner by placing the first plank with the tongue side facing the wall. Use spacers along each wall to maintain an expansion space of 8-12 mm ($^5/_{16}$ in - $^3/_8$ in) between the wall and the flooring.

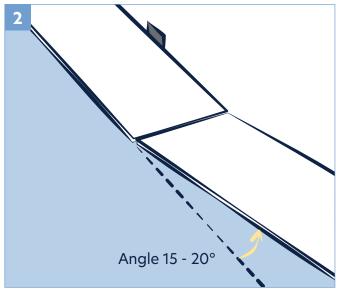

To attach the second plank, insert the end tongue into the end groove of the very first plank at an angle of approx. 15-20 degrees. When lowered, the plank will click into place. Line up edges carefully. The planks should be flat to the floor.

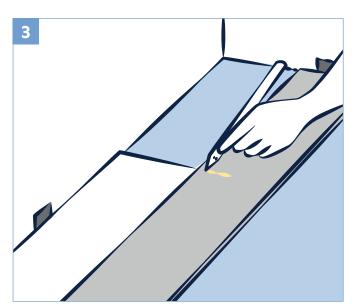


Continue connecting the first row until you reach the last full plank. Fit the last plank by rotating the plank 180° with the pattern side upward, place beside row. Measure and mark, then using a ruler and utility knife, score the plank and snap off. Attach as described above.

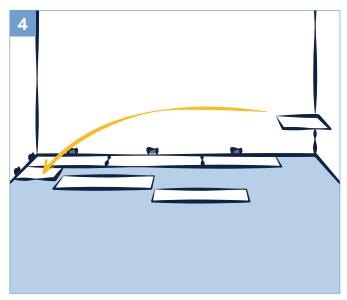


Begin the next row with the off-cut piece from the previous row to stagger the pattern. Pieces should be a minimum of 20 cm (8 in) long and joint offset should be at least 40 cm (16 in).

Note


It is faster to assemble planks into a new row at the ends and then attach the entire row to the previous row on the long sides. To start your second row, lay your first plank on the subfloor. Take your second plank, insert the end tongue into the end groove of the first plank at an angle of approx. 15-20 degrees. When lowered, the plank will click into place with light pressure. The planks should be flat to the floor. Make sure gaps are as small as possible. Continue assembling the planks this way until you have your second row complete.

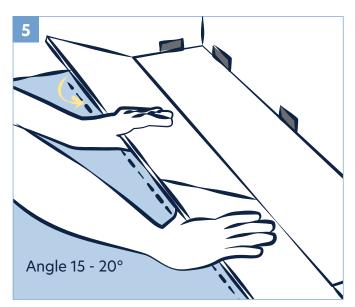


To attach the second row to the first row, tilt and push the side tongue into the side groove of the first panel at an angle of approx. 15-20 degrees. Lower and click into place lining the edges up carefully. Continue laying remaining planks in this manner.

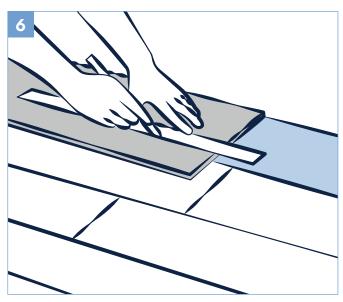

To fit the last row, lay a plank on top of the previous row. With the tongue to the wall, lay another plank upside down on the one to be measured and use it as a ruler. Don't forget to allow room for spacers. Cut the plank and attach into position.

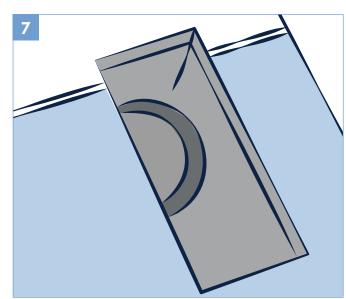

Door frames and heating vents also require expansion room. First cut the plank to the correct length. Then place the cut plank next to its actual position and use a ruler to measure the areas to be cut out and mark them. Cut out the marked points allowing the necessary expansion distance on each side.

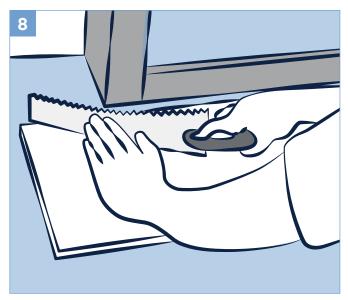

You can trim door frames by turning a plank upside down and using a handsaw to cut away the necessary height so that planks slide easily under the frames.

How to Install Clever Click Rigid

Care and maintenance

Sweep regularly to remove surface grit and dust. Use a damp cloth or mop to clean up any dirt and footprints but avoid using excessive moisture. All spills should be cleaned up immediately.



Caution!

Planks are slippery when wet.

Do not use a wet spray micro fiber mop. Never use wax, polish, abrasive cleaners or scouring agents as they may dull or distort the finish. High heels can damage floors. Use protective pads under furniture. Use doormats at entrance ways to protect floor from discoloring. Do not allow pets with unclipped nails to scratch or damage the floor.

Avoid exposure to direct sunlight for prolonged periods of time. Use drapes or blinds to minimize direct sunlight during peak sunlight hours.

It's a good idea to save a few planks in case of accidental damage. Planks can be replaced or repaired by a flooring professional.

Notes

